


Penn State Harrisburg Library


Portable DVD Player Instructions

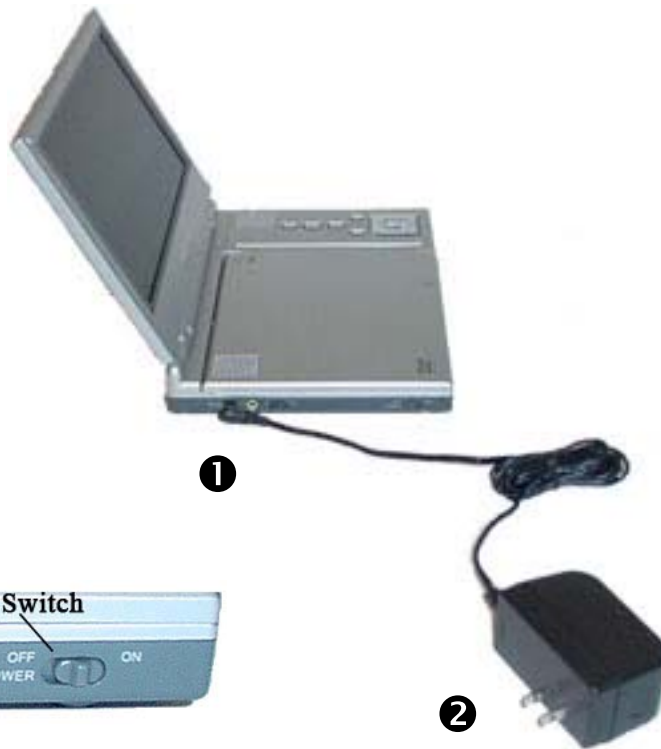

Plug the AC adapter cable into the DC 9V Input Jack **1** and then plug the adapter **2** into an electrical outlet. Slide the Power Switch **3** to the On position.



Open the disc tray **4** by sliding the Open Switch **5** to the right. Place a disc into the tray, and then close the disc tray cover.

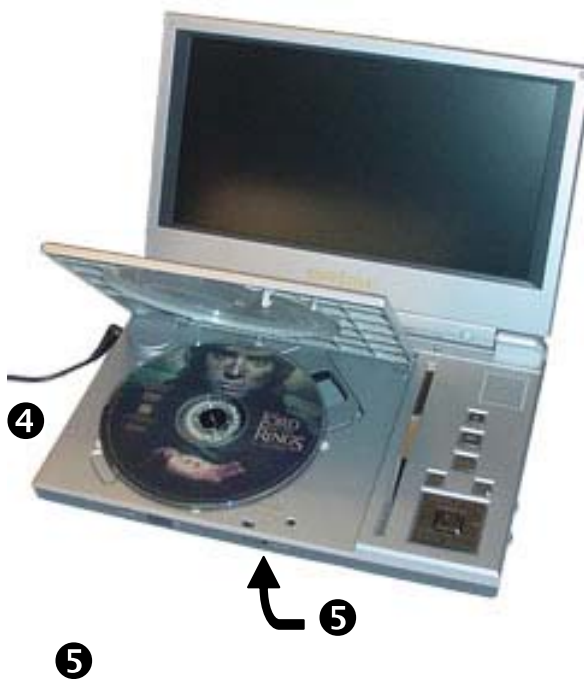

Continued 

To begin playing a disc, press the Play/OK button ⑥. Use the other buttons to control playback, adjust the display, and navigate menus:

Stop - Press once to stop at the current playing point.

Press twice to stop playing completely.

Previous - Go back to the previous chapter, track, or scene during playback.


Next - Go to the next chapter, track, or scene during playback.

Menu - Display the main menu of the disc.


Wide - Adjust the width of the screen display for different aspect ratios.

Left, Right, Up, Down - Use for menu navigation.

Play/OK - Use to start playback or to execute an item or setting from the menu.

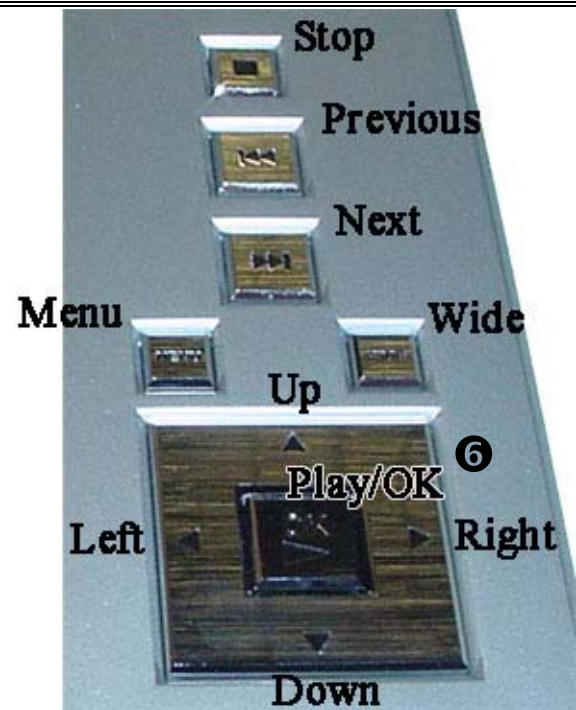

Use the Brightness ⑦ and Volume ⑧ controls to adjust the screen display and audio output. Headphones for use with the DVD player's two Headphone Jacks ⑨ are available for sign-out at the Circulation/Reserves desk.

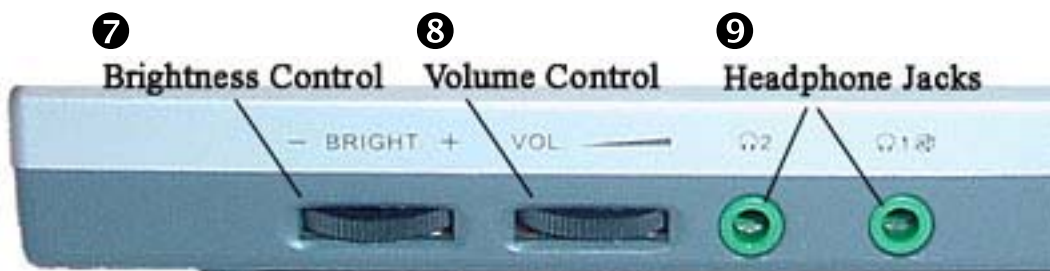

Assistance

For assistance, please contact Alan Mays, information technology consultant (717-948-6593; axm22@psu.edu) or inquire at the Circulation/Reserves desk.

Source: Adapted from the Insignia IS-PD101351 Portable DVD Player owner's manual.